


**THIS PRODUCT SHOULD BE PERMANENTLY ANCHORED TO THE WALL  
OR OTHER SUITABLE SURFACE TO AVOID SERIOUS INJURY OR DEATH.**

To help avoid any serious injury or death, this product includes a wall strap to prevent toppling. We strongly recommend that this product be permanently fixed to the wall or other suitable surface. Different surface materials require different attachments. Please seek professional advice if you are in doubt what fixing hardware to use. Regularly check your fixing device.

# SCHEMATICS

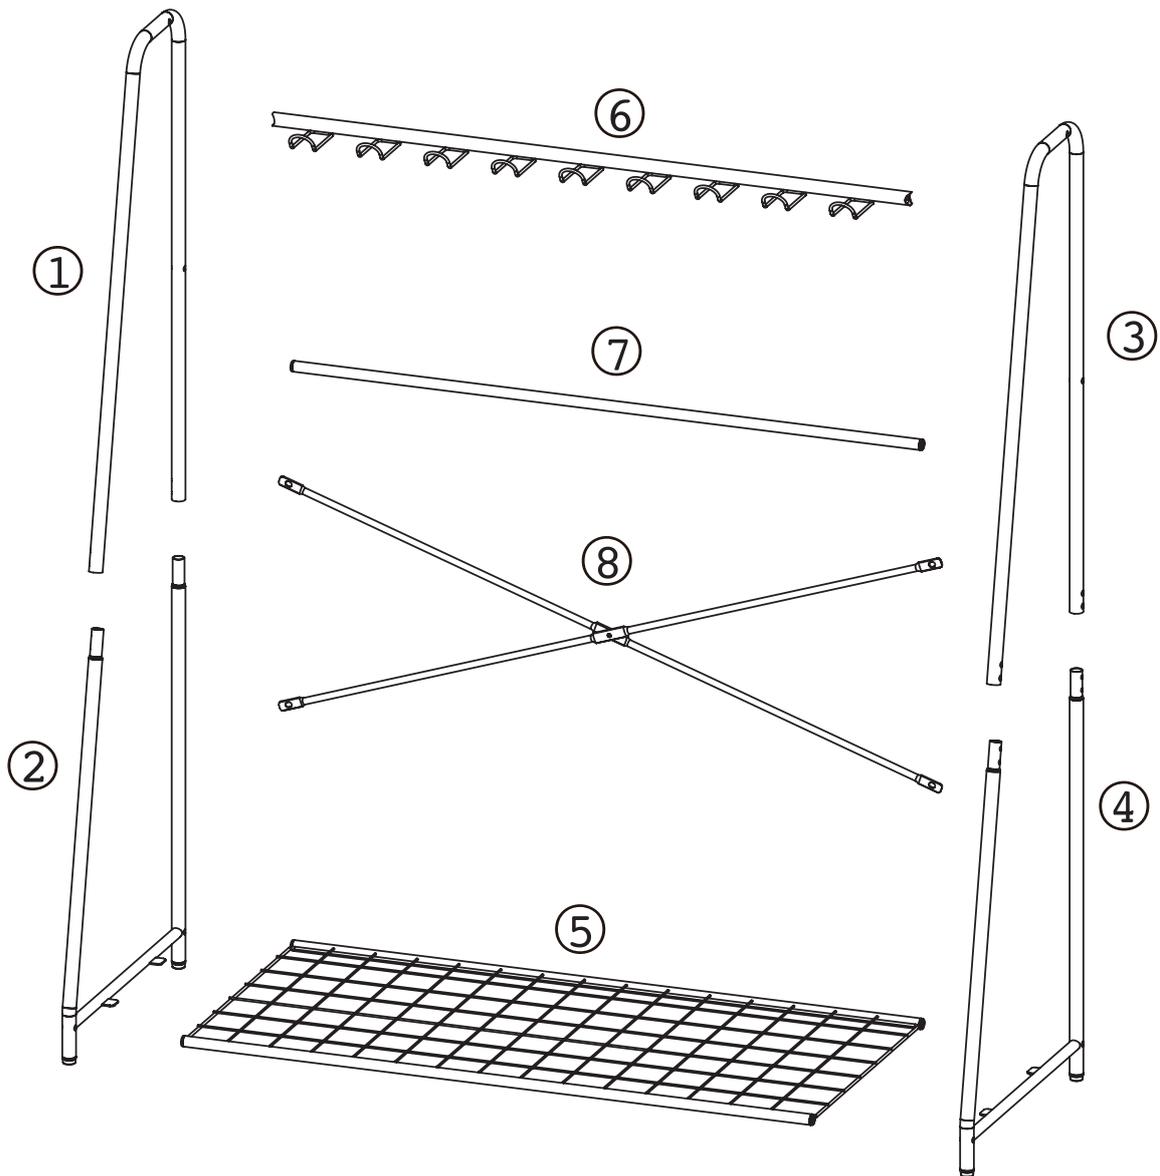

## PARTS PACK

 
Screws A	8
Screw B	12
Allen Key C	1
Wall Straps D	2
Washers E	4
Screws F	2
Wall Plugs G	2




**A X 8**



**B X 12**



**C X 1**

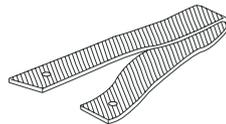

**D X 2**



**E X 4**




**F X 2**




**G X 2**

# HOW TO ASSEMBLE

## STEP 1

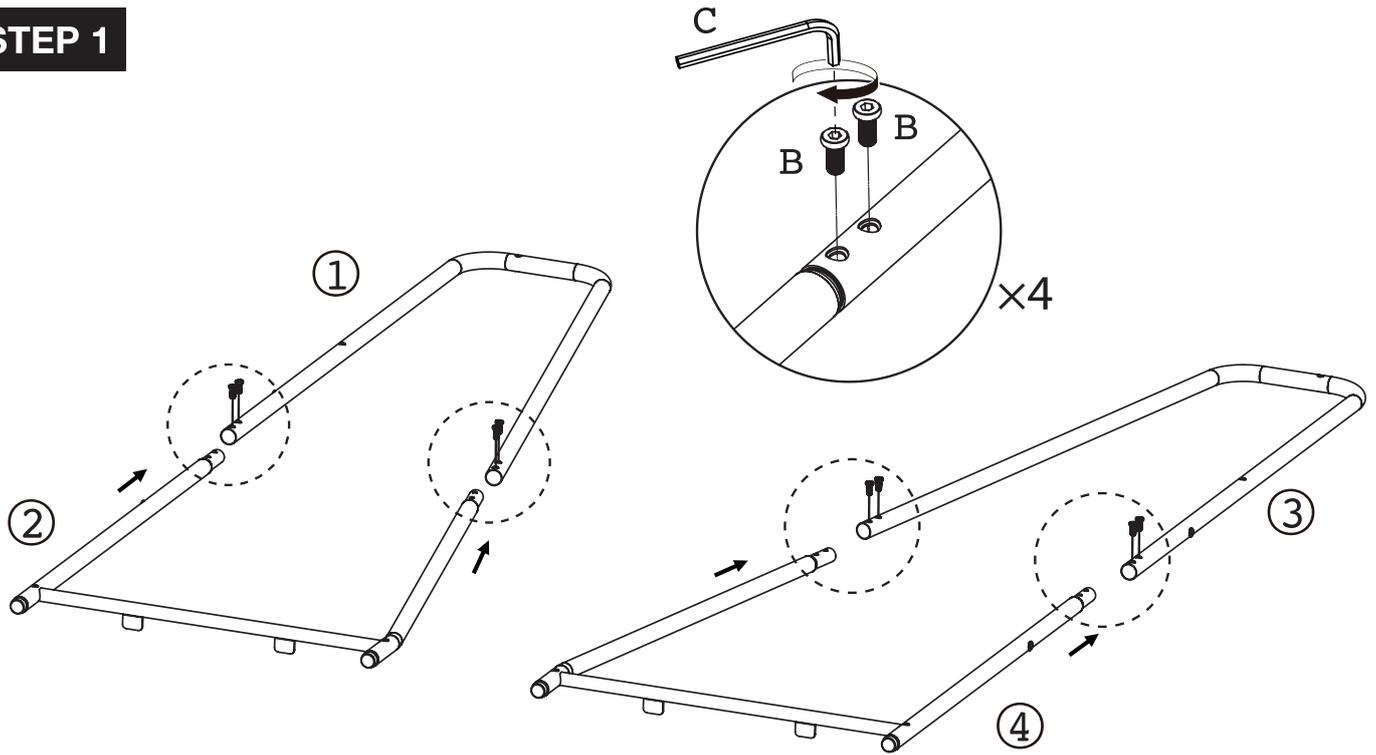


## STEP 2

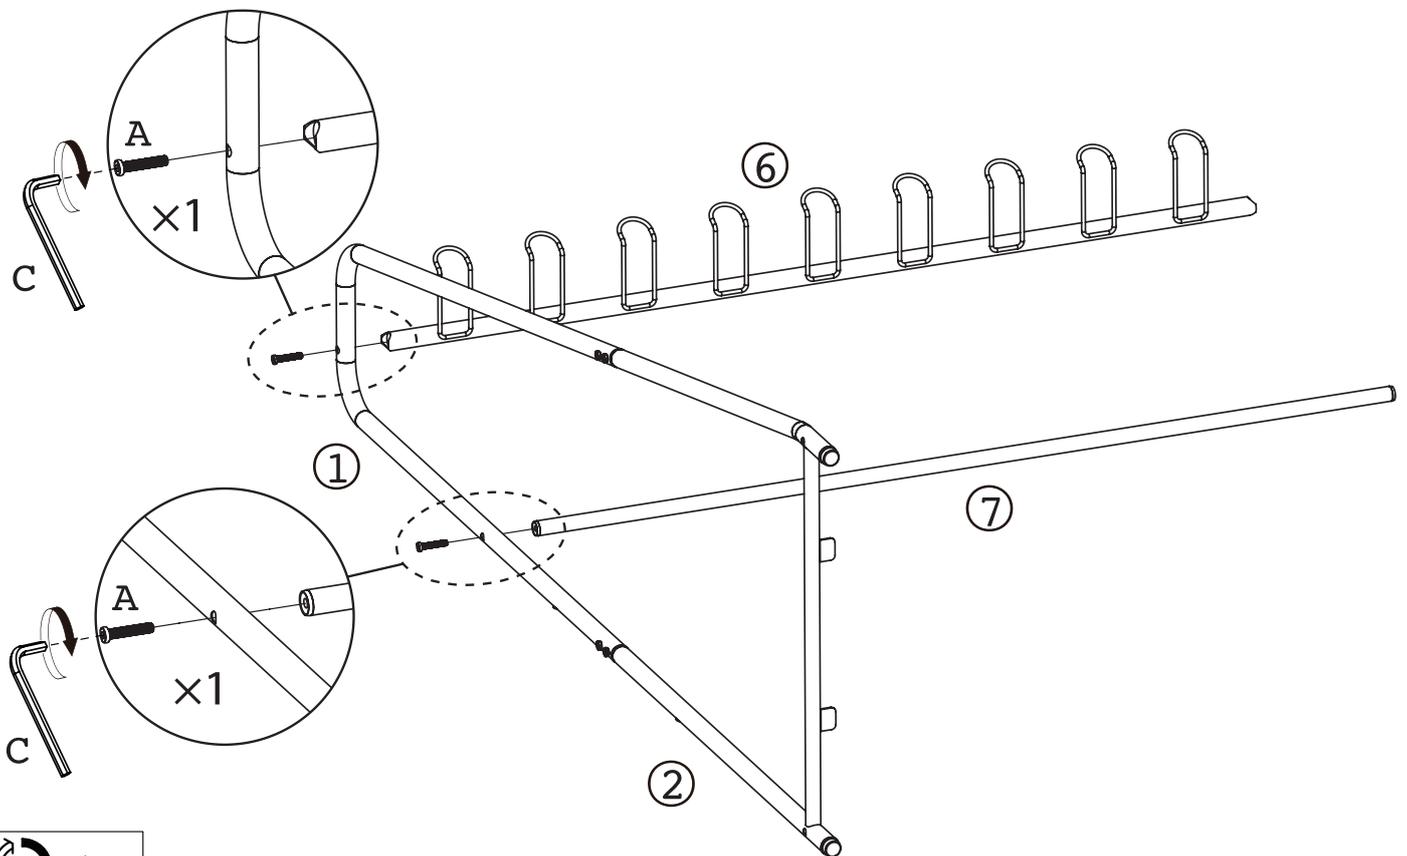


### STEP 3


Ensure the part sticker is facing upwards on the bottom shelf before installing.

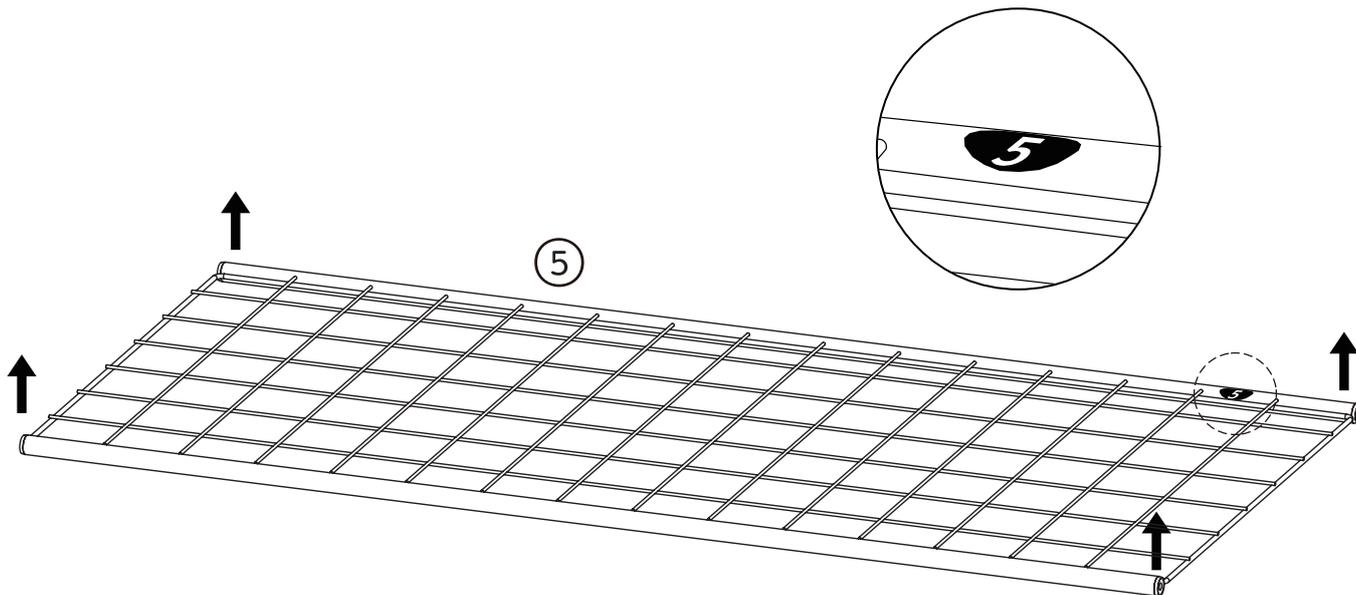



### STEP 4

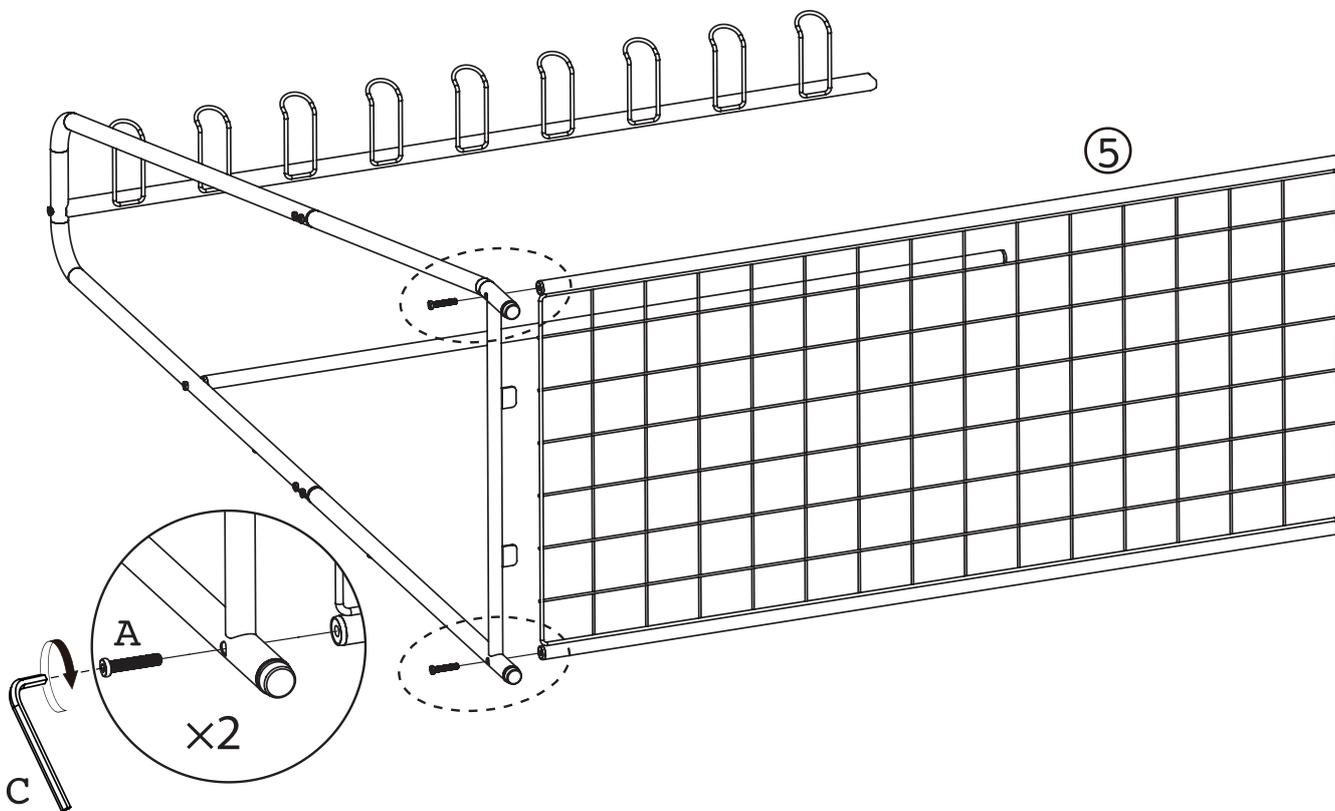


**STEP 5**

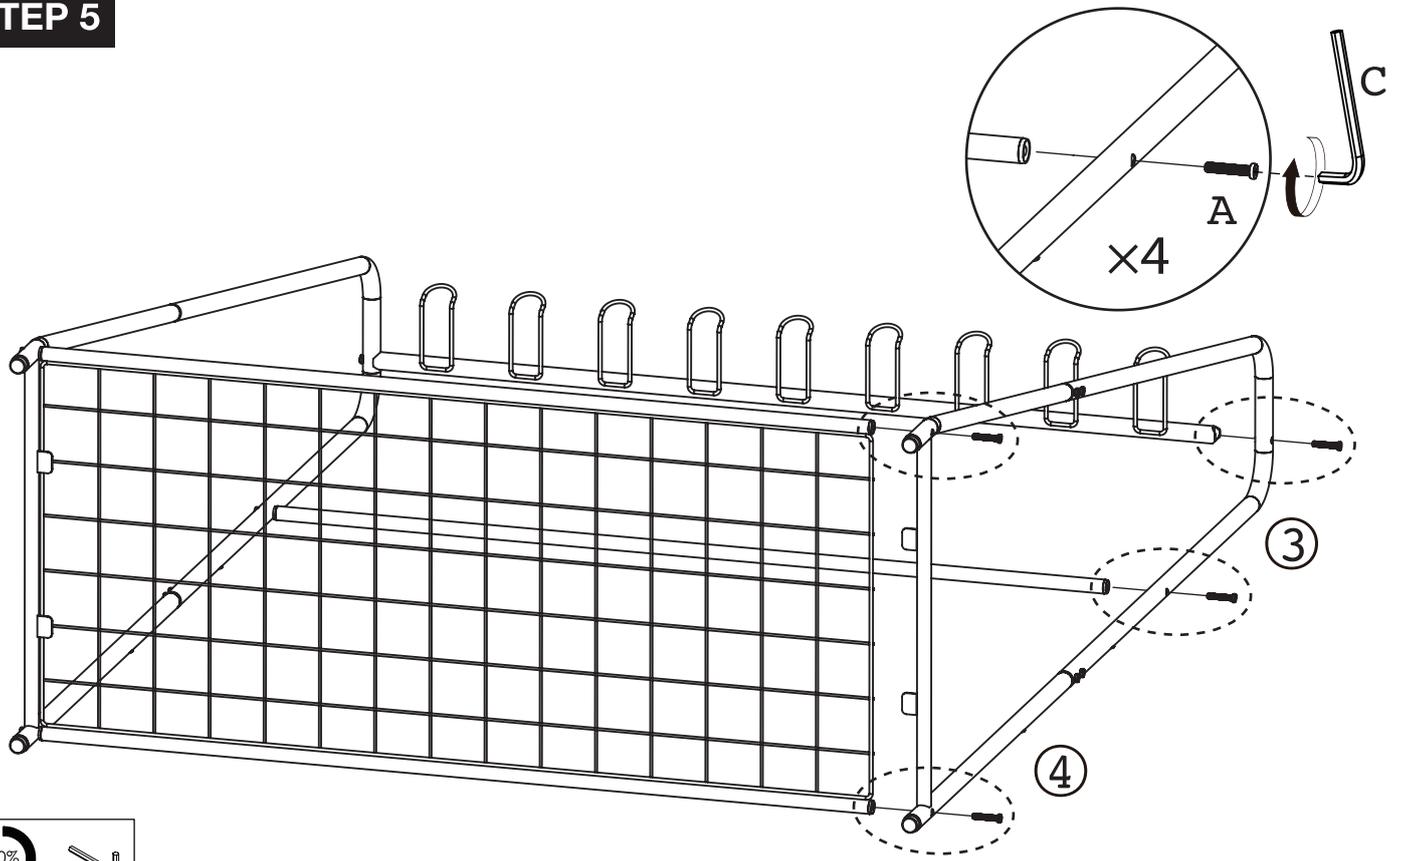

**STEP 6**

 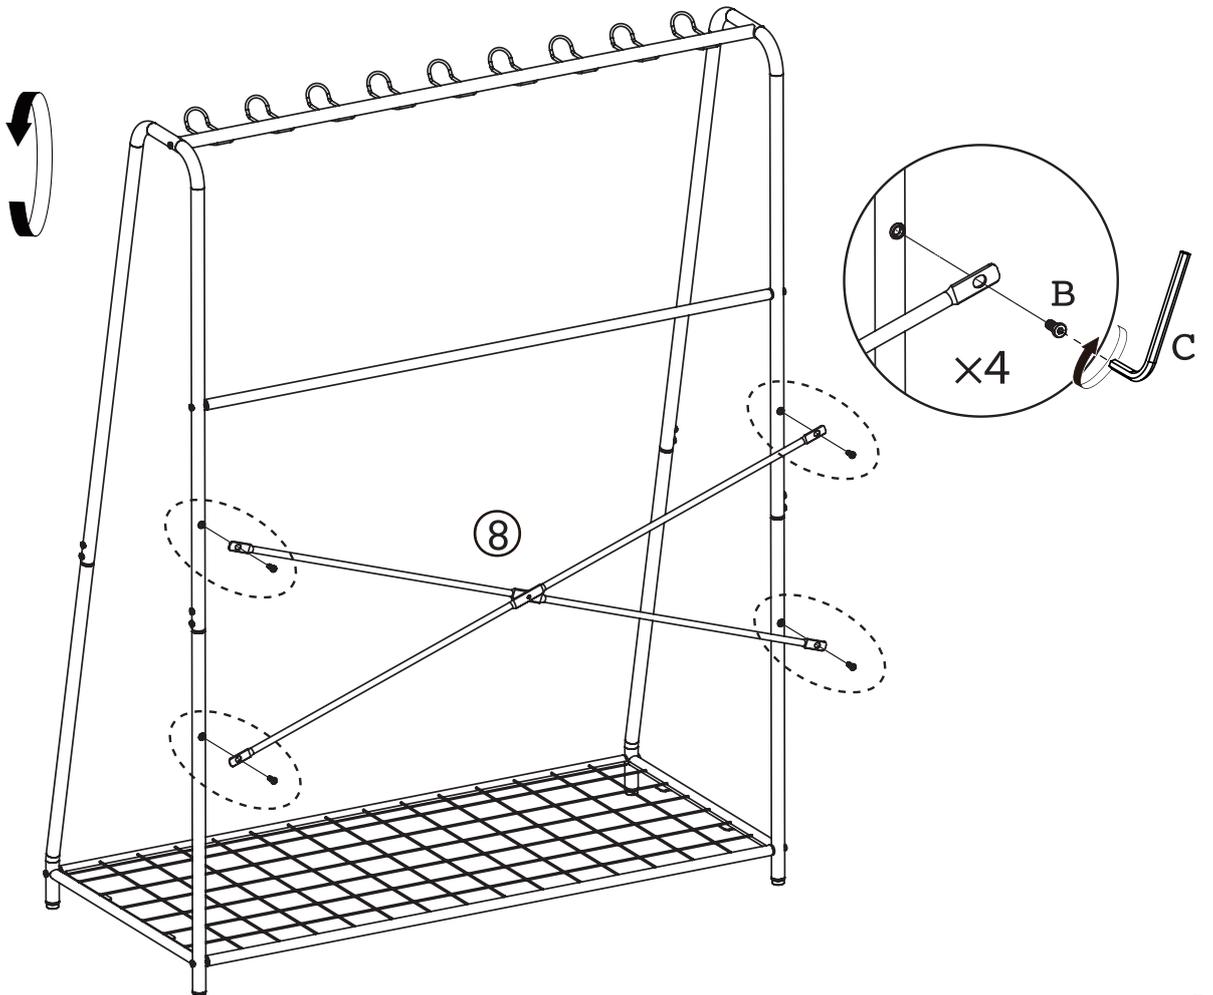

# STEP 7

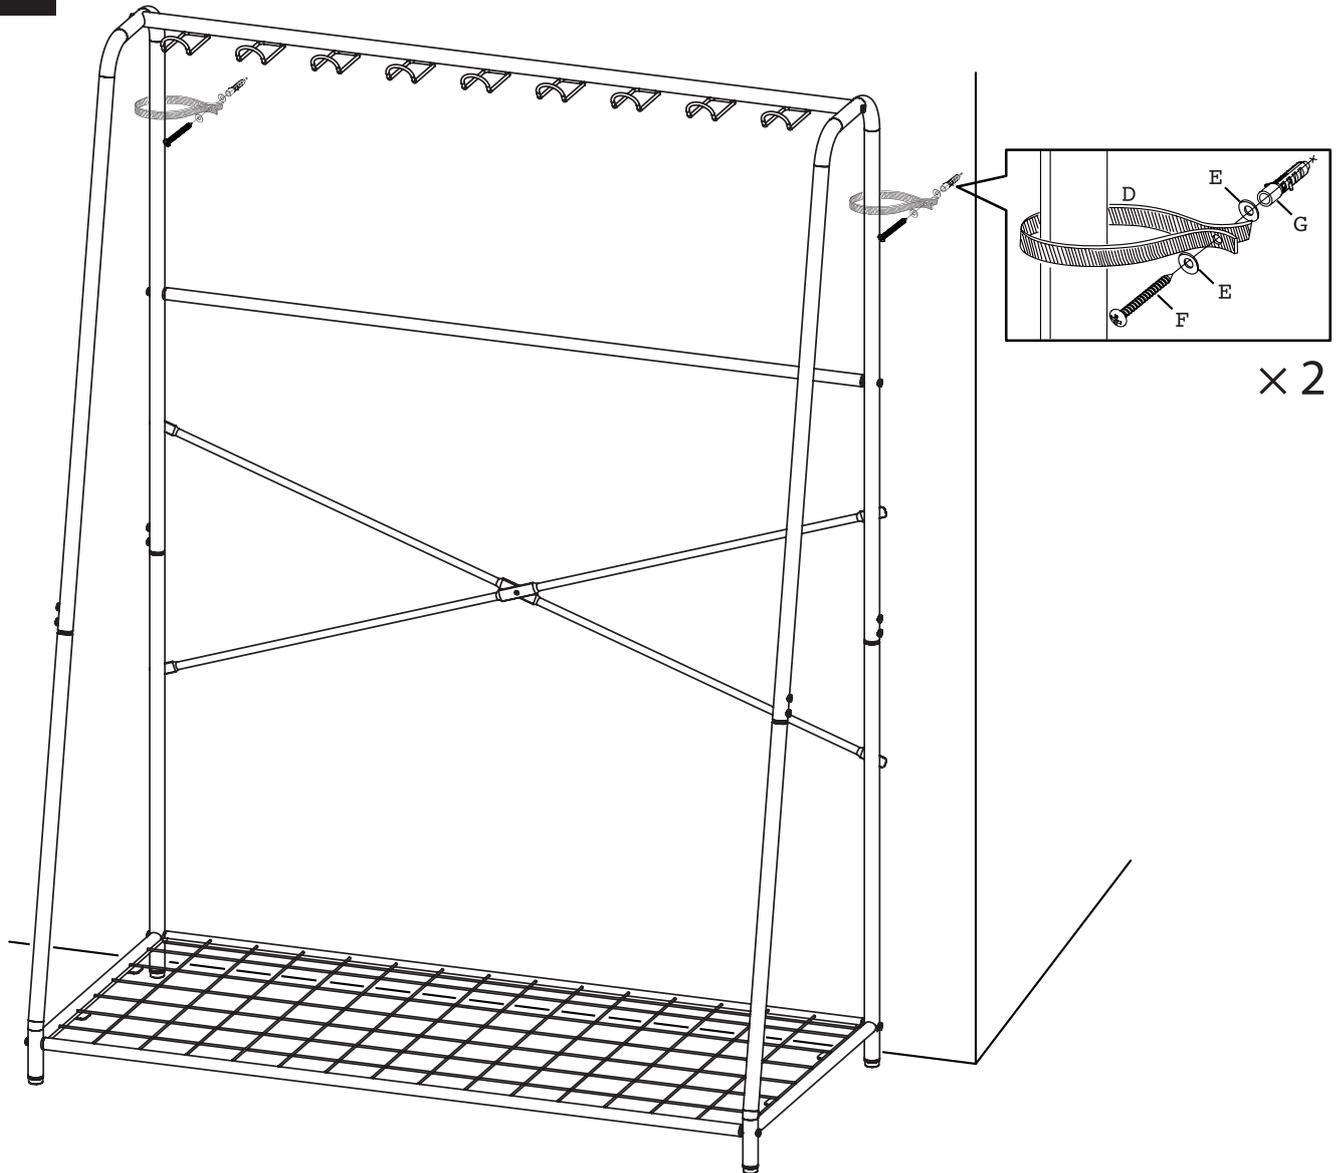

**⚠ WARNING**

**Children have died from furniture tipover.**

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

**NEVER put a TV on this furniture**